



Secondary Hood Latch Inspection Procedure

1. Lift the vehicle hood.

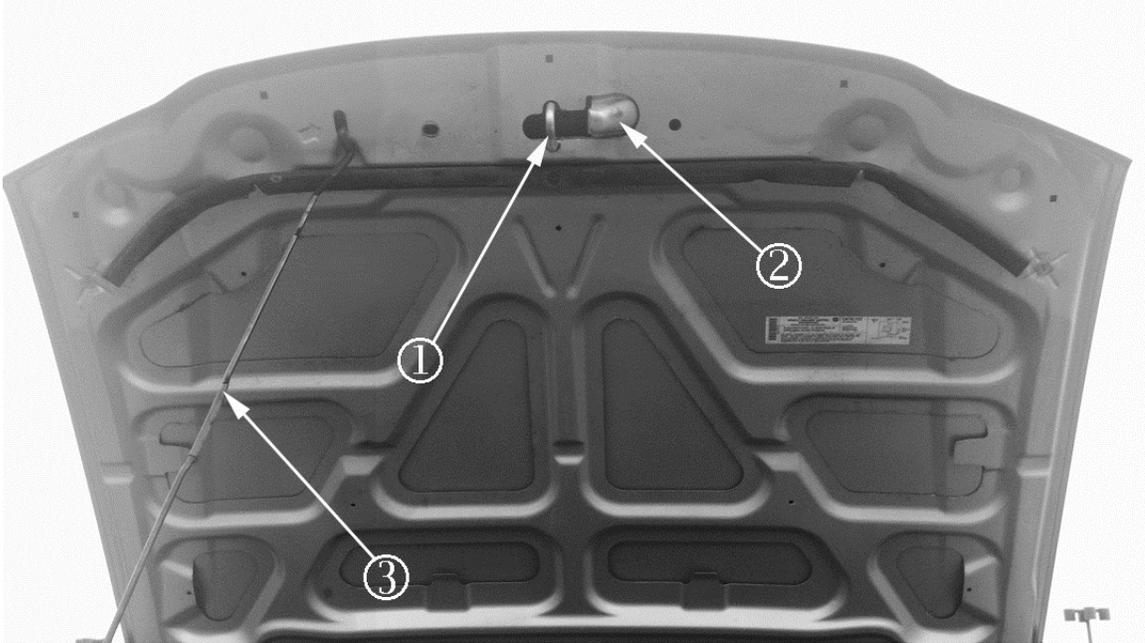

2. Release the hood prop from its retainer and put the hood prop into the slot in the hood (3).
3. Locate the primary (1) and secondary (2) hood latches. Refer to the illustration above.

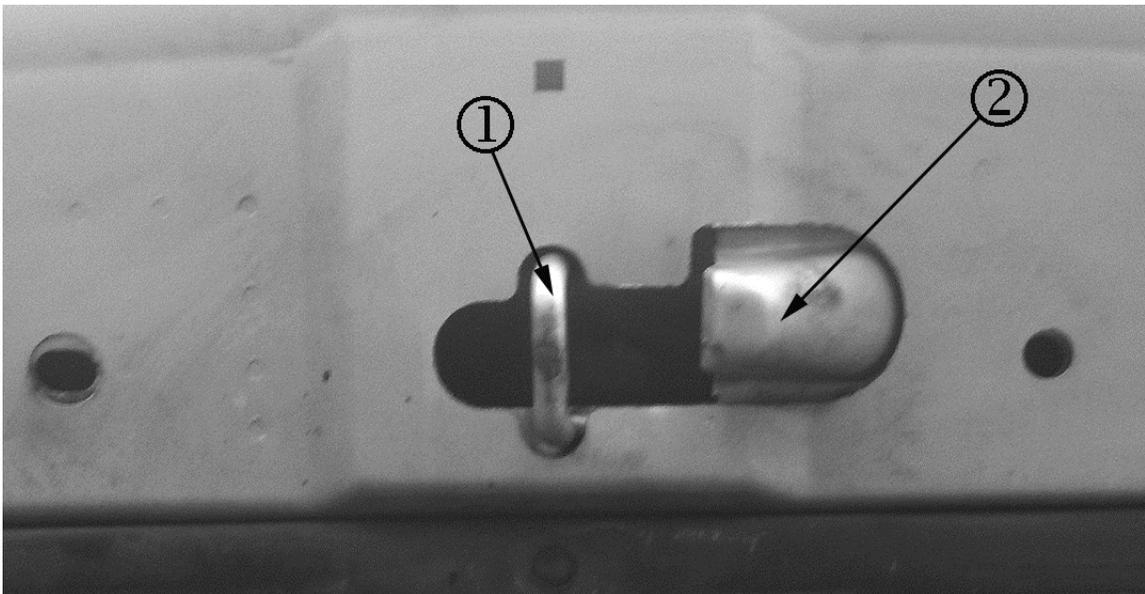

4. Determine if the hood is assembled with a secondary latch (2).
 - If the vehicle hood is assembled with a secondary latch, no further action is required. Close the hood by lifting the hood to relieve pressure on the hood prop. Remove the hood prop from the slot in the hood and return the prop to its retainer. Lower the hood 25 to 30 cm (10 to 12 in) above the

vehicle and release it to latch fully. Check to make sure the hood is closed and repeat the procedure if necessary. Complete the enclosed reply form and return it to us. We will close the recall.

- **If the vehicle hood is NOT assembled with a secondary latch, contact your dealer as soon as possible and schedule an appointment to have the hood replaced.** Close the hood by lifting the hood to relieve pressure on the hood prop. Remove the hood prop from the slot in the hood and return the prop to its retainer. Lower the hood 25 to 30 cm (10 to 12 in) above the vehicle and release it to latch fully. Check to make sure the hood is closed and repeat the procedure if necessary.