

PROCEDURE**Note:**


Make a note of the new airbag module serial number prior to installation. The serial number for the new airbag module must be entered in the comment box in the warranty application. Ensure that you enter the serial number without any blank spaces. Otherwise, it is not possible to uniquely assign the number.

REP 72 12 000: Removing and replacing airbag module on passenger's side


Warning!

Necessary preliminary tasks:


- We cannot rule out that the retaining straps of the airbag lid have been damaged by airbag deployment. Note before repair if there is any damage.
- We cannot guarantee correct function of the retaining straps when reusing a possibly damaged airbag lid. Inspect the lid before repair.

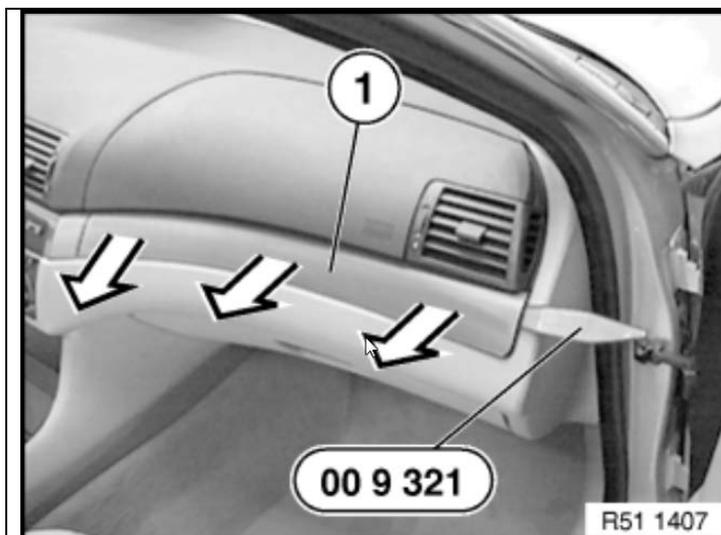


- Insert special tool 00 9 321 at the side and with the second special tool 00 9 321 next to the retaining pin.
- Unclip the decorative strip (1).

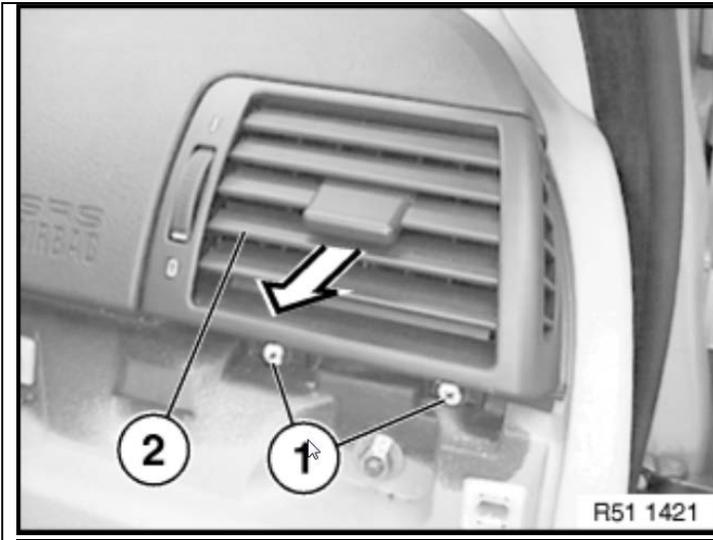

- Loosen the screws (1).
- Withdraw the fresh air grill (2) in the direction of the arrow.

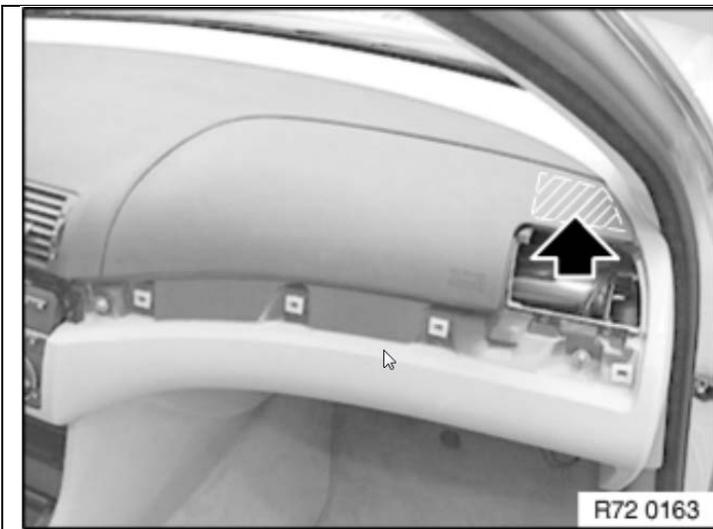


- Position of the retaining clip of the front passenger's airbag cover

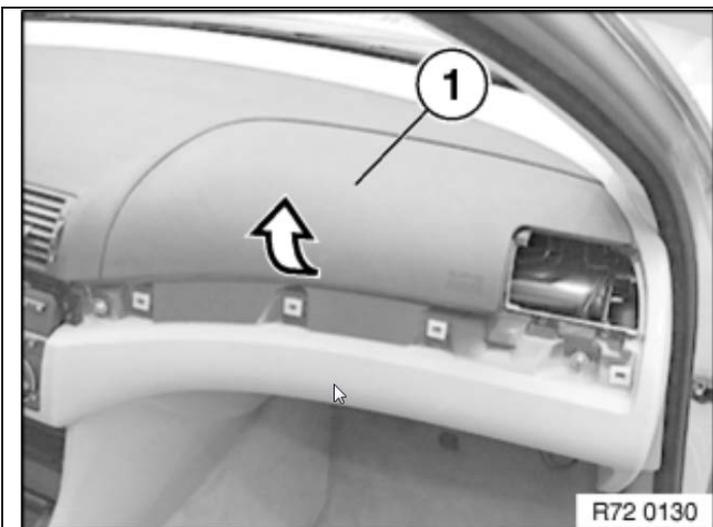

- Lever out the front passenger's airbag cover (1).

Note:

The retaining clip remains in the dashboard when removing the cover.

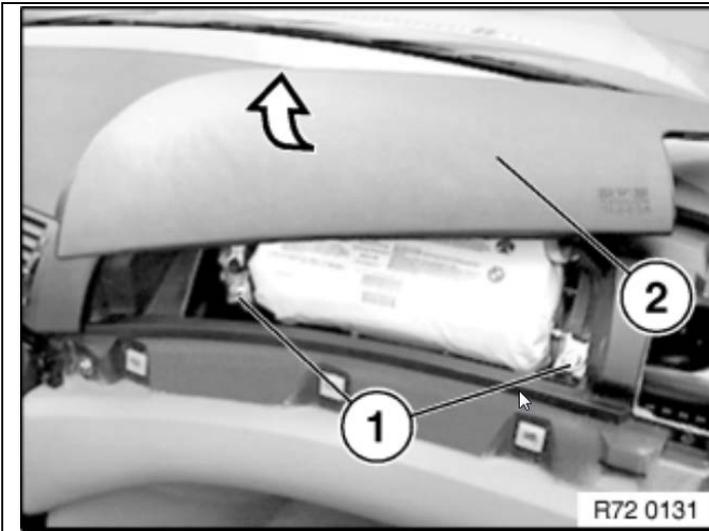


- Undo the screws (1) and place the front passenger's airbag cover (2) on top.

Install

- Tightening torque for the retaining straps for the cover, passenger's airbag module on the instrument panel carrier: 9 Nm


Main work:

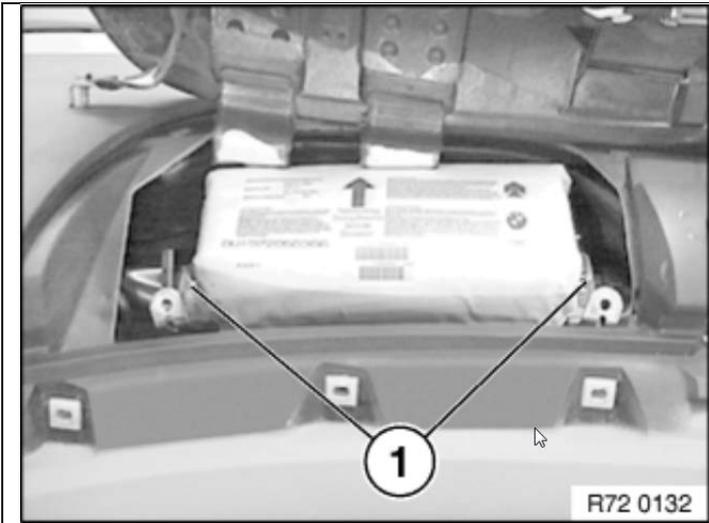


- Undo the screws (1) at the front passenger's airbag module.

Install

- Tightening torque for the passenger's airbag module on the instrument panel carrier: M8 nut, 22 Nm

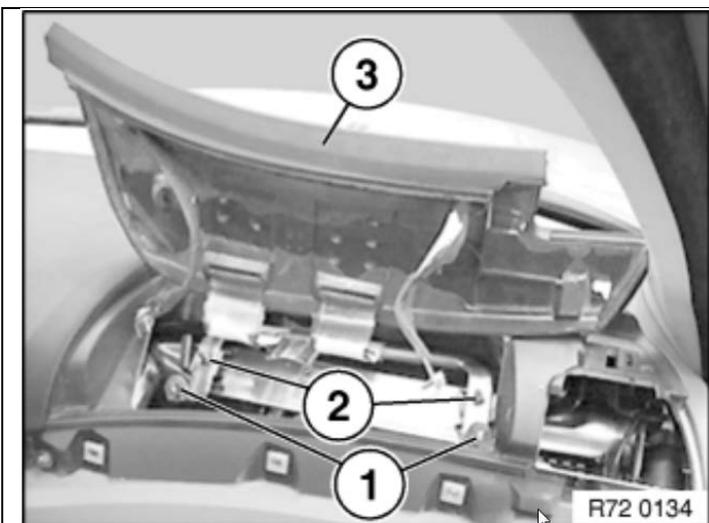


- Pull off the retaining tube (1) from the stud bolt (2) and completely remove the cover (3).
- Remove and replace the passenger's side airbag module.

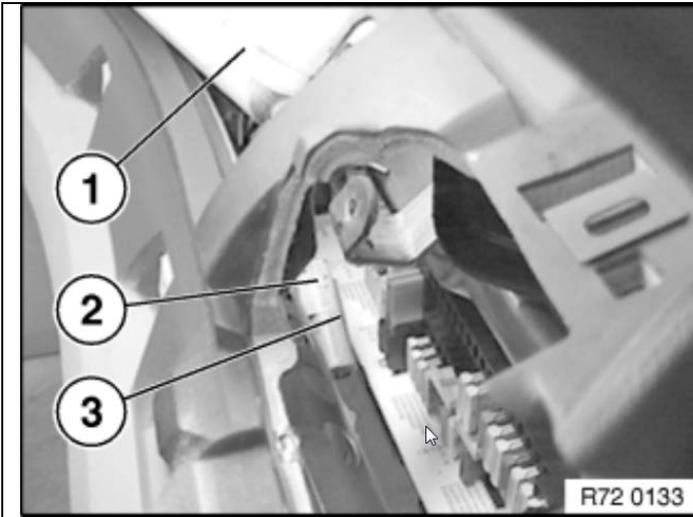**Note:**


Do not tension the cable when removing the front passenger's airbag module (1)!

When lift front passenger's airbag module (1) and move sideways:

- Open the lock by pressing on the tab (2).
- Disconnect the plug connection (3).
- Remove the front passenger's airbag module (1).

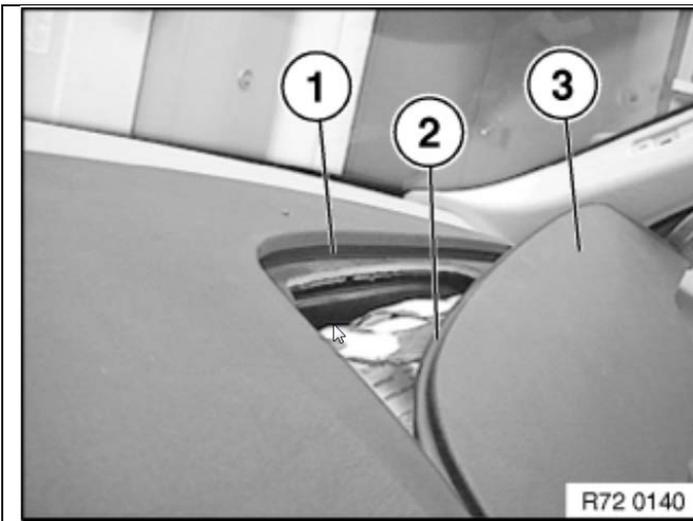Follow up work:**Installation note:**

The front passenger's airbag cover (3) must engage into the all-round groove (1) of the dashboard with the lug (2).

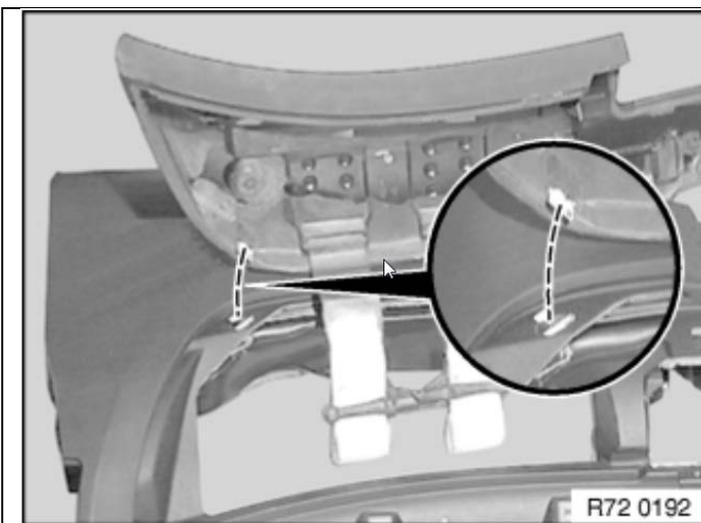**Installation note:**

The additional retaining lug at the front passenger's airbag cover must engage in the retaining clip of the dashboard trim panel.

Final work after installing the new module:

- Reinstall the wood trim.

- Reconnect the battery.
- Check faults and the airbag light.