


Fig 1

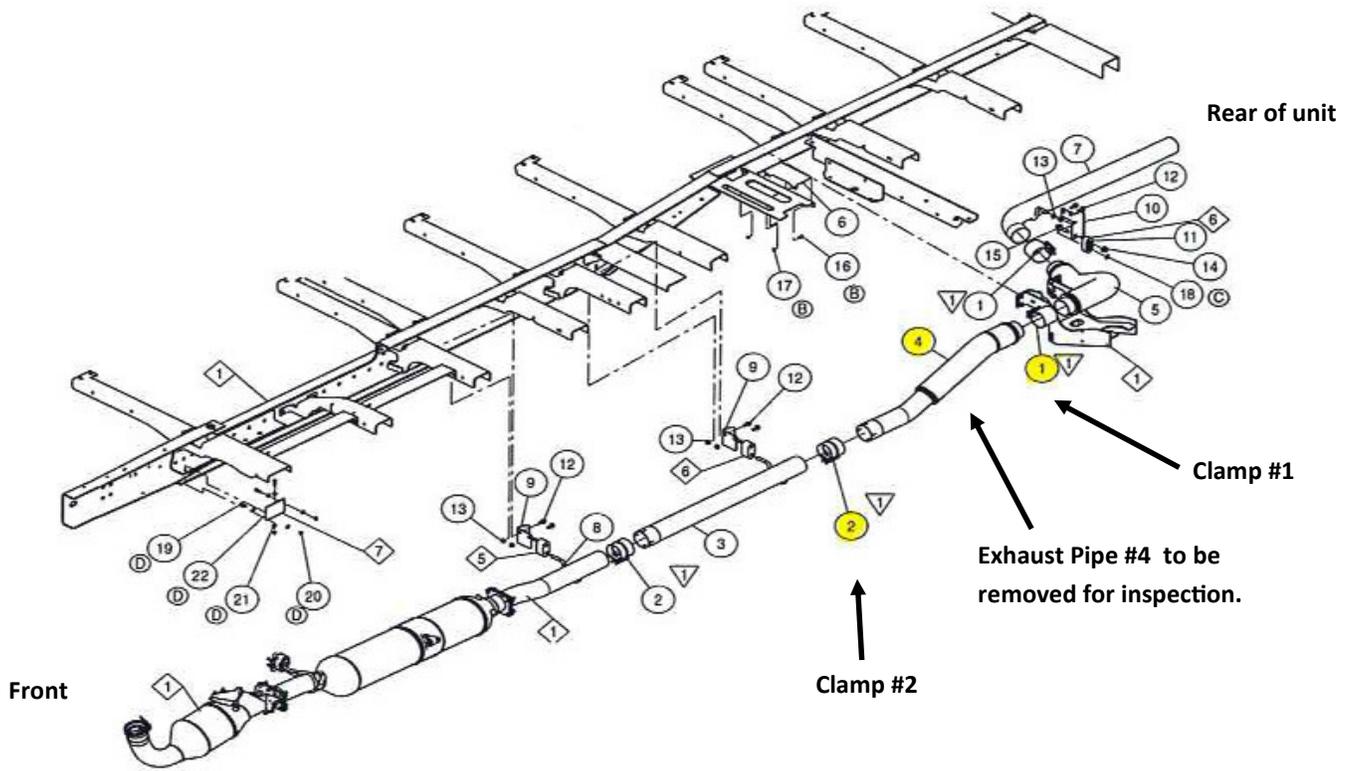

1. Disconnect the exhaust at the clamp behind the curbside rear tire #2 (see above)
2. Disconnect the exhaust at the clamp above rear axle #1 (see above)
3. Remove the exhaust pipe #4 (see above)
4. Look into the pipe the portion with the heat sleeve and inspect for holes. Note: a flashlight may be necessary depending on the lighting. Also inspect the floor for burn areas.
 - A. No screw hole found in exhaust pipe. Reinstall exhaust pipe by reversing process .
 - B. If a hole is found
 1. Take pictures of the flooring and of the interior of exhaust tube email to Jerry Casto Jcasto@forestriverinc.com or call 1-800-445-2825
 2. Order part # 2476-LL2-001 exhaust tube #4 (above) Once received replace by reversing the process above.
 3. Once replaced place original damaged exhaust in box and return with UPS call tag sent.