



Recall Campaign

NHTSA#: 13V-558

TC#: 2013-391

Job Code: 9901117

Flat Rate: 0.5 hours

REQUIRES PARTS TO BE ORDERED FROM Jayco for every unit.

ACTION REQUIRED:

Add stop plate to the lifter system mechanism

MODELS / UNITS:

2011 CAMPING TRAILERS

Jay Series

1007 **B1BB** 0163-0182, 0184, 0186-0191

1006 **B1BC** 0075-0076, 0087-0095, 0105, 0107, 0109-0116

1207 **B1BD** 0116-0126, 0134-0135, 0139-0147, 0153-0161, 0163

2013 CAMPING TRAILERS

Jay Series

1207 **D2BD** 0052-0075

KIT CONTENTS

Note: Kit can only be ordered using the order form included with this bulletin.

- (1) Stop plate
- (4) Washers
- (1) Instruction sheet

TOOLS/MATERIAL REQ.:

Screw gun with square head bit
3/8" socket

INSTRUCTIONS



1. Locate the lifter system mechanism. You will be required to remove either a dinette seat panel, or a storage cabinet panel depending on the model (as listed below).

<u>Jay Series</u>	1007	B1BB	rear dinette seat
	1006	B1BC	rear dinette seat
	1207	B1BD	storage cabinet
		D2BD	storage cabinet

2. Once you have gained access, locate the lifter system actuator (end) piece (**Fig. 1a**).





3. Using a 3/8" socket, remove the (2) screws that hold the actuator in place. Remove the tailstock (end piece).

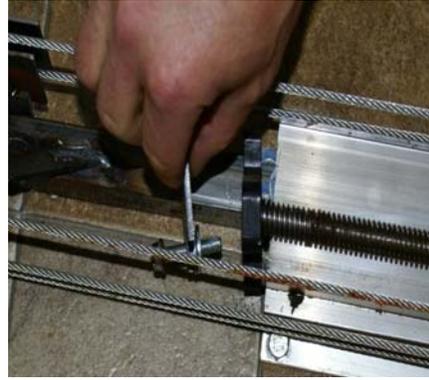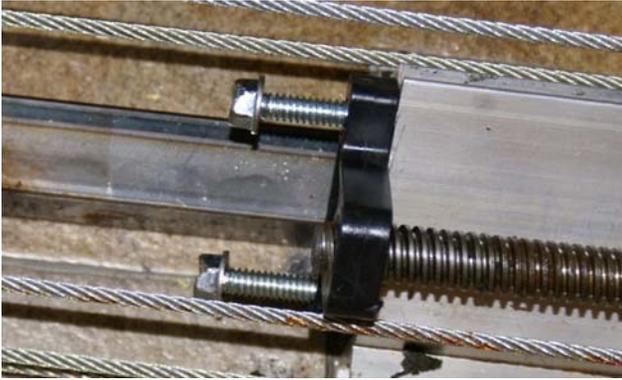

4. Insert the screw through the hole in the plate, the corresponding hole in the tailstock and then add (2) washers. Re-install the screw into the corresponding hole and screw it into place just enough to hold it in place. Insert the second screw through the holes in the other side of the plate and the tail piece. Add (2) washers to the back side of the tailstock.

NOTE: Looking at the plate, the notch should be on the right side so the plate doesn't restrict or touch the cable (Fig. 4a).

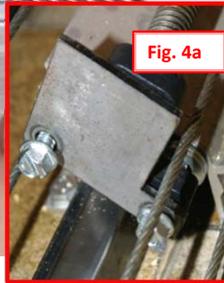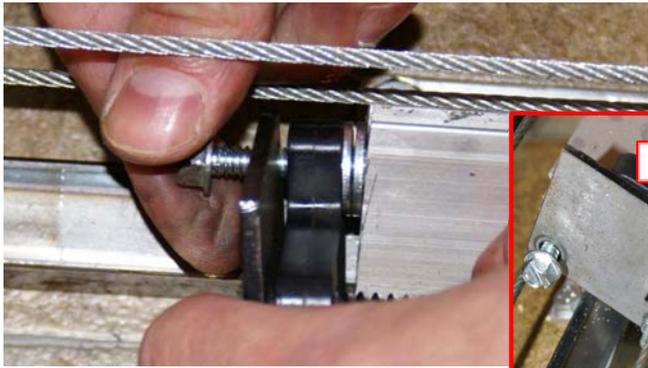

5. Tighten both screws making sure the screws are securely in place.



6. Return access configuration to the original position.