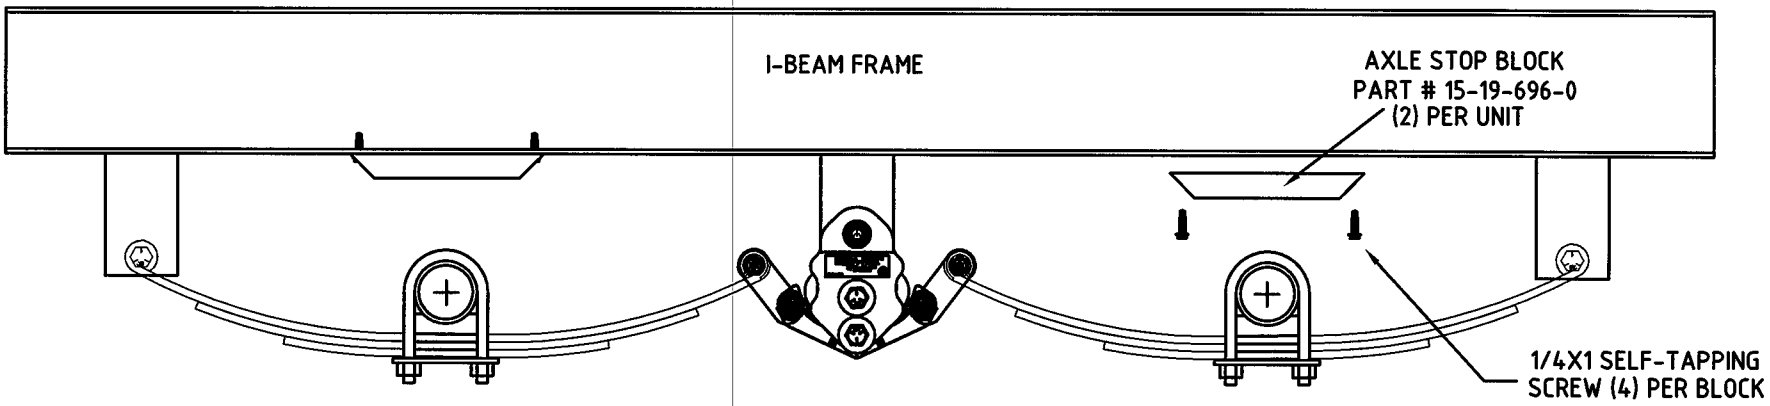

PLACE AXLE STOP BLOCK DIRECTLY ABOVE THE AXLE AND SCREW IN PLACE WITH (4) 1/4X1 SELF-TAPPING SCREWS ONLY NEEDED ON THE DOORSIDE

SHOWN WITHOUT WHEELS AND BRAKE DRUMS FOR CLARITY

REVISED: 12/16/14 10:49 Winnebago of Indiana LLC, claims exclusive rights to the information documented hereon. neither this drawing nor any production thereof may be used to manufacture anything shown without permission in writing from Winnebago of Indiana LLC.

Winnebago Industries Towables 201 14TH ST. - Middlebury, IN 46540	SCALE: 1/8" = 1" (B7) ECN: 00-000	DWN. FOR: / MODEL: 2015 2451 BHS 2201 DS	DESCRIPTION AXLE STOP BLOCK INSTALLATION	DATE 12/16/14 DWG. 15-23-383-0	1 OF 1